


CONTINUOUS 3 LANE PASSING LANE

ALTERNATING (RETROFIT) PASSING LANE

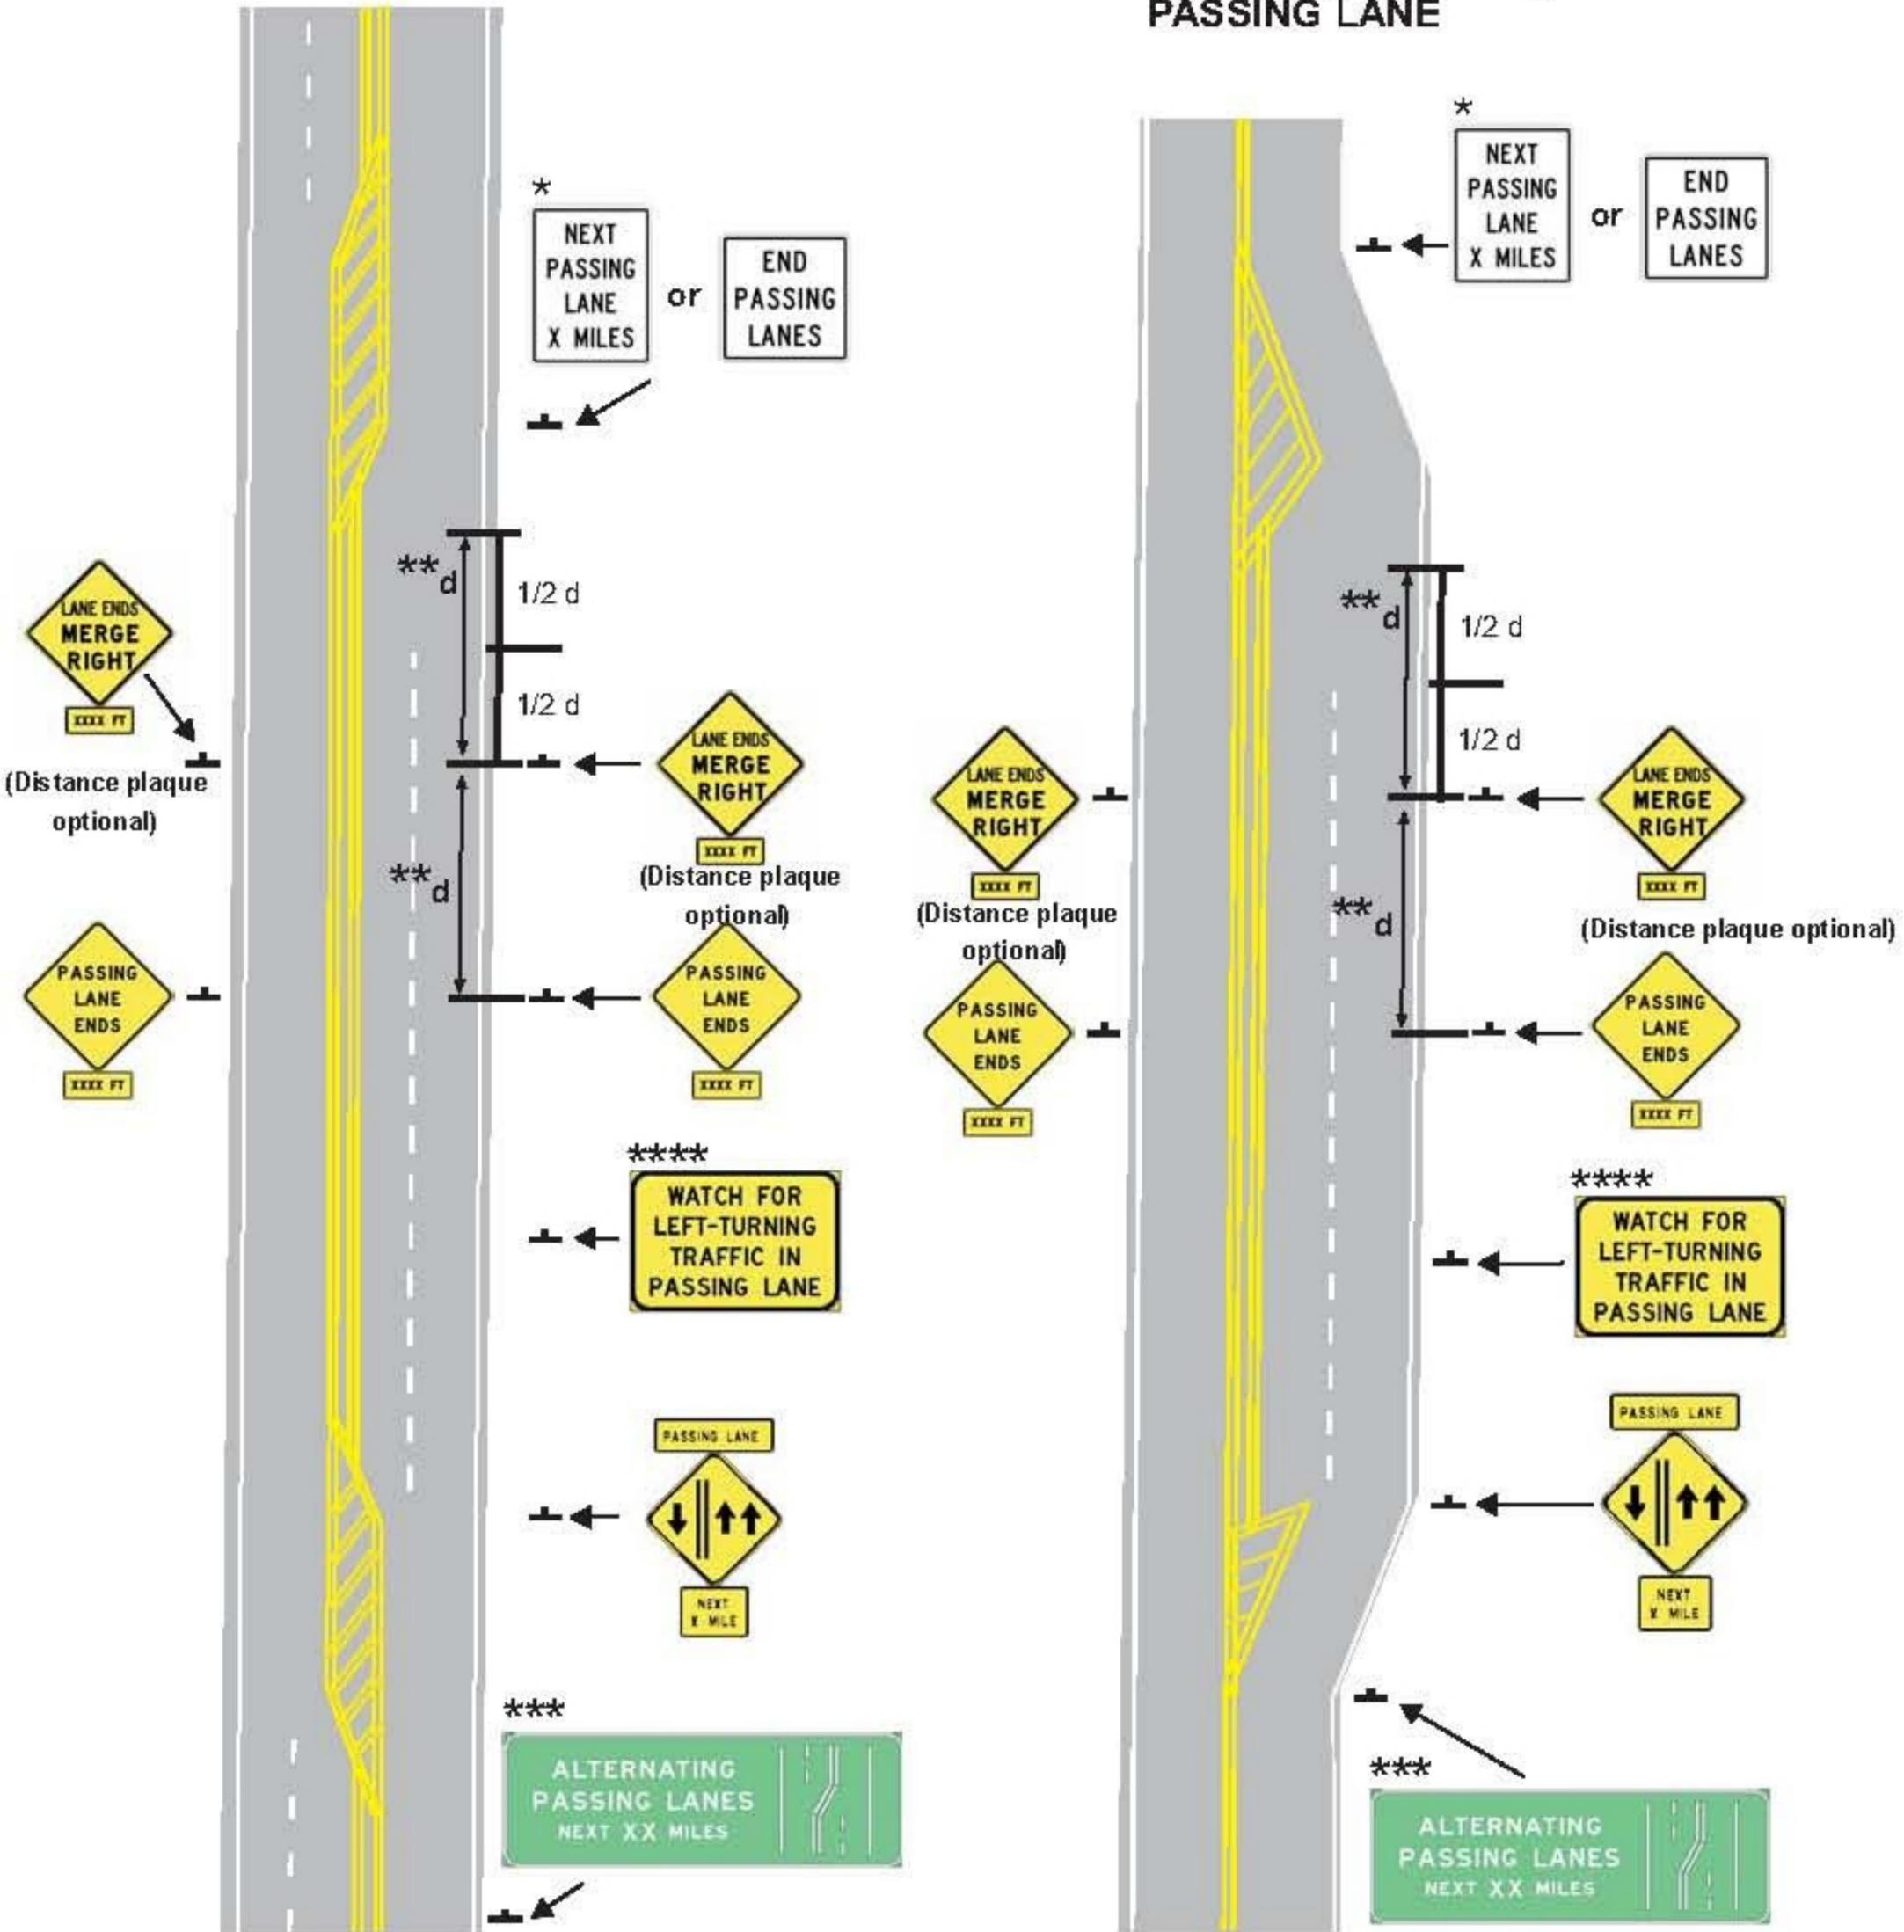

* "NEXT PASSING LANE X MILES" - used if series continues within the next 10 miles

** "END PASSING LANE" - used at last passing lane in series or if next passing lane is farther than 10 miles
 d = Warning Sign spacing found in EPG 903.6 measured from beginning of taper to the Warning

Sign & the distance measured between the Warning Sign & the Advanced Warning Sign

*** In advance of the first passing lane within the series

**** DO NOT USE if guardcable is installed. May be installed at judgment of engineer.